



**CORRECT  
INSTALLATION**

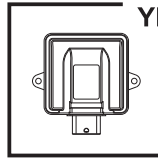


YES



NO


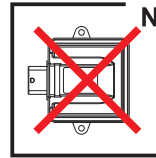


NO

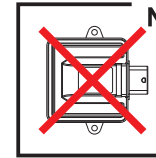

NO

A1	INJ1_petrol_ECU	A2	INJ2_petrol_ECU	A3	INJ3_petrol_ECU	A4	INJ4_petrol_ECU
B1	INJ1_petrol	B2	INJ2_petrol	B3	INJ3_petrol	B4	INJ4_petrol
C1	INJ1_Gas	C2	INJ2_Gas	C3	INJ3_Gas	C4	INJ4_Gas
D1	Ignition switch signal (optional)	D2	Gas pressure	D3	MAP	D4	Lambda probe
E1	Gas temperature sensor	E2	Reducer temperature sensor	E3	Gas level sensor	E4	Petrol-Gas switch date
F1	Petrol-Gas switch power supply	F2	Pressure sensor power supply	F3	TXD diagnostic connector	F4	RXD diagnostic connector
G1	+12 INJECTORS	G2	GND SIGNAL (out)	G3	+12 battery	G4	GND
H1	+12 INJECTORS	H2	+12 Electro-valve	H3	+12 battery	H4	GND

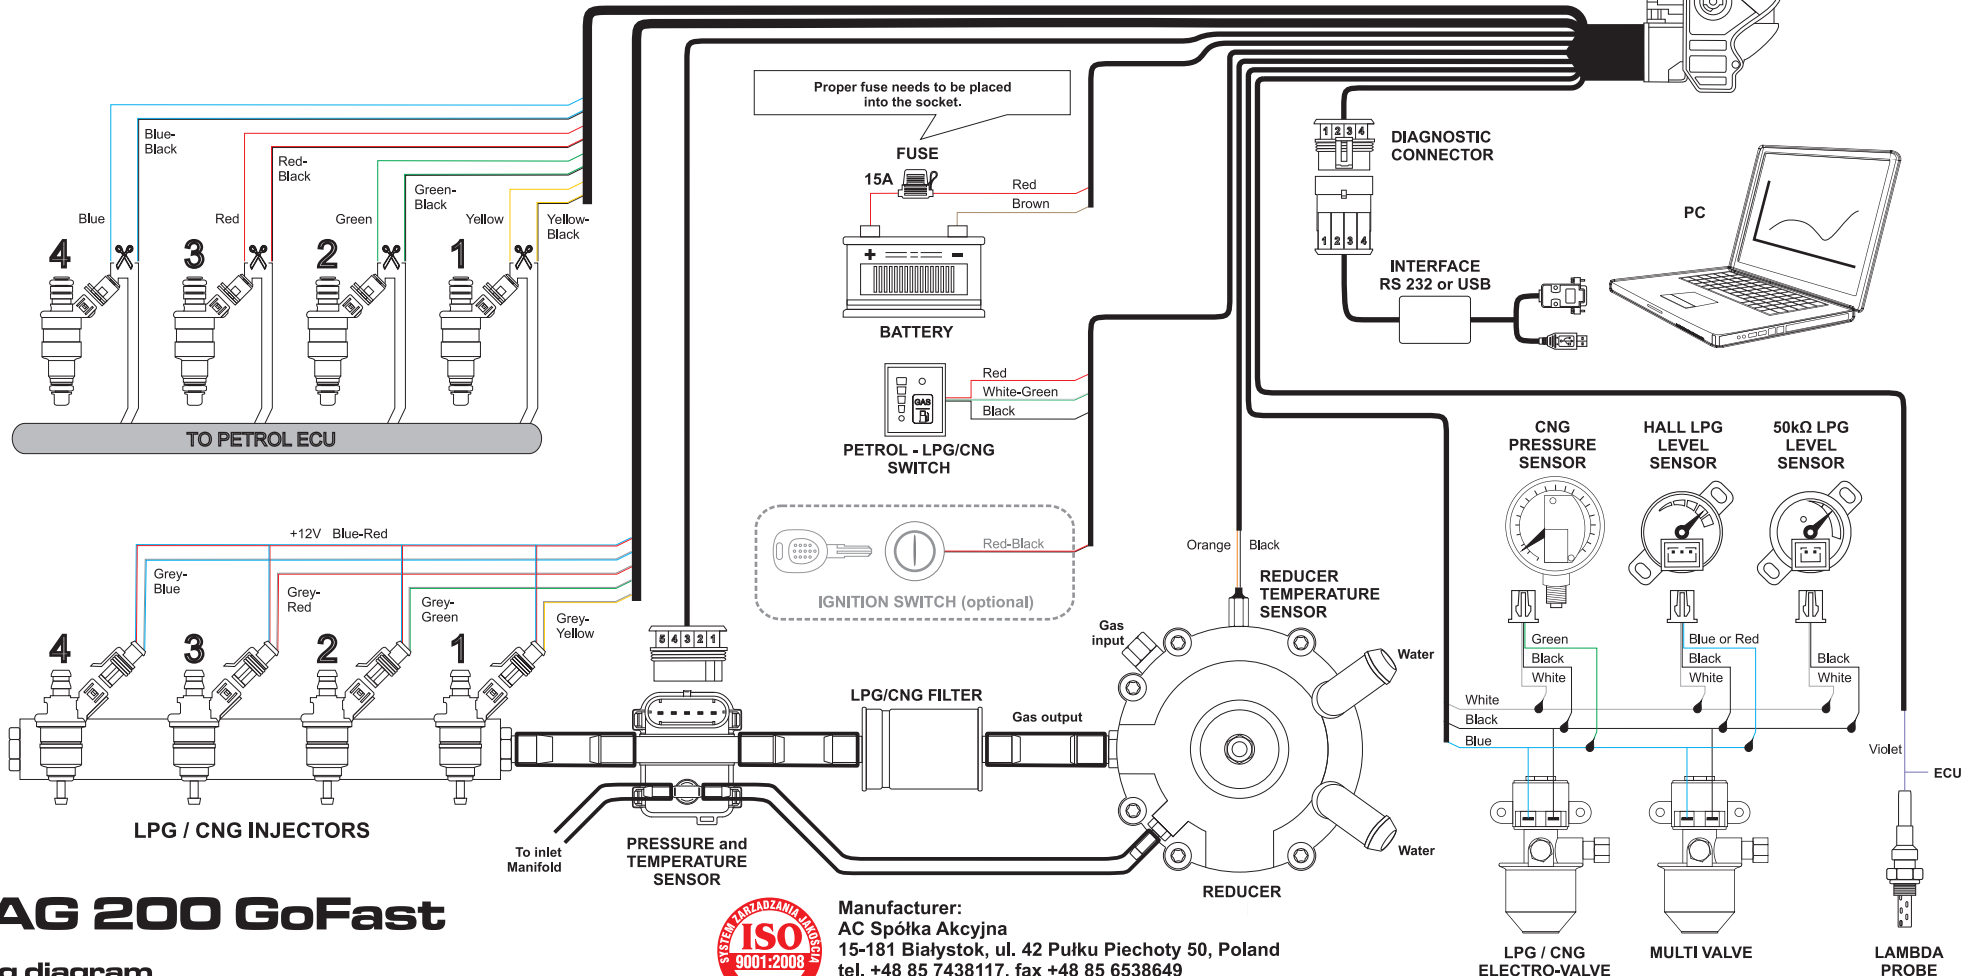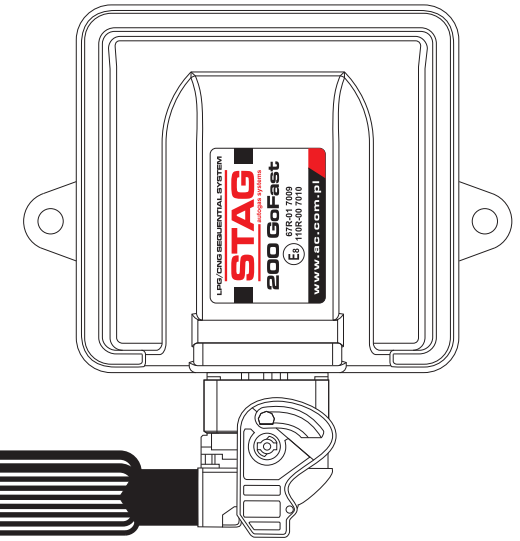

## STAG 200 GoFast

### Wiring diagram



Manufacturer:  
AC Spółka Akcyjna  
15-181 Białystok, ul. 42 Pułku Piechoty 50, Poland  
tel. +48 85 7438117, fax +48 85 6538649  
www.ac.com.pl, e-mail: autogaz@ac.com.pl

"04-128.95.00.4 z dn. 23.06.2014"

**ATTENTION:** The current version of Stag200Easy application is available on website: [www.ac.com.pl/en/doc/346/instructions](http://www.ac.com.pl/en/doc/346/instructions)